



**IC Refrigeration's
Smartwaste
TE-35 and TE-35XL Installation Guide**

Step 1

- Place trash receptacle in desired location.
- Ensure the access door is clear to open freely.




Step 2

- Remove waste bin and installation hardware from inner cabinet section to access the mounting holes located on the bottom.



Step 3

- Mark out anchor points at all four corners of the trash receptacle.
- Move TE-35 out of the way so you can access markings.

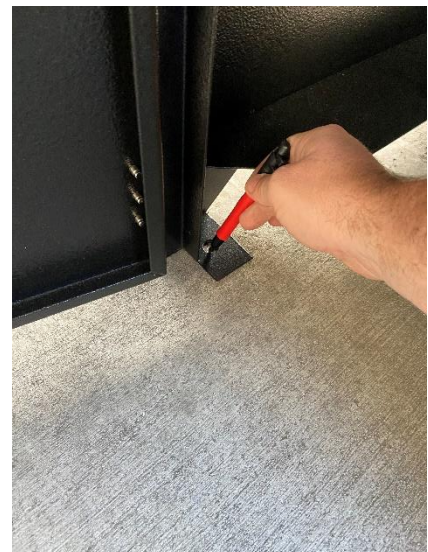


Step 4

- Using a 1/2" masonry drill bit, drill all four holes roughly 2" deep
- Clean the holes.



Step 5

- With a hammer, embed your provided anchors so that about 2" of thread is still exposed.
- Run one of the 1/2 " nuts down to the ground.
- The TE-35 will sit on top of this nut and washer.

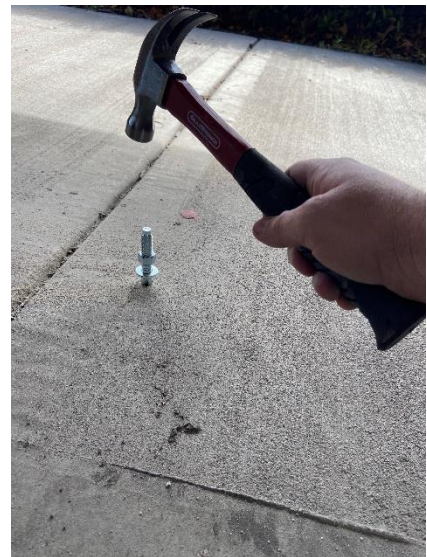

Step 6

- Set your TE-35 trash receptacle into place allowing the anchors to pass through the holes in the bottom.
- Using a level ensure that the top of the TE-35 is level.



Step 7

- Loosely thread the top nuts into place
- With a 3/4" open end wrench you can slowly adjust the bottom nut on the low side to bring the TE-35 into level.

Note: If you do not level the front corners of the TE-35 you may run into issues with the door operating properly.



Step 8

- Tighten all four top nuts
- Slide the provided 35 gallon trash bin into place.



Step 8

- You've now installed your own Smartwaste TE-35 Trash Receptacle!

